

- **Garage door operator mode -**

In this mode the control card waits for each instruction from the user. However when triggered while closing the close sequence stops and the open sequence immediately starts again.

From the closed position;

1. BT trigger starts the opening sequence,
2. BT trigger or open limit stops the opening sequence,
3. BT trigger starts the closing sequence,
4. BT trigger stops the closing sequence and immediately the opening sequence begins again.