


How to program a remote into your:
CHALLENGER MkIII

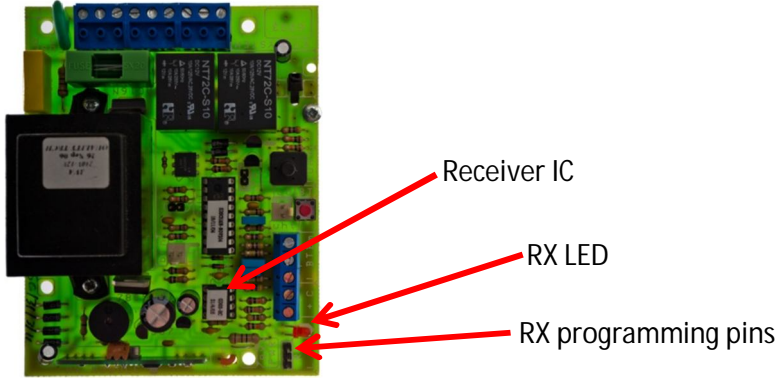

ET BLUE




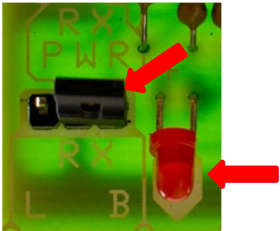
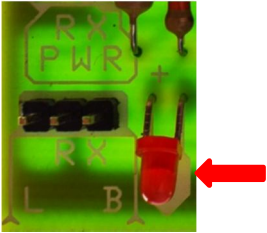
**Compatible with both the
ET Blue and ET BLU MIX ranges of remotes**

(NB. The ET BLU MIX remote button must be set to the old ET Blue code for use on this motor if the receiver IC has no © logo on it.)

ET BLU MIX


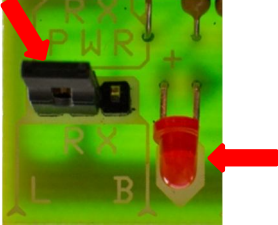
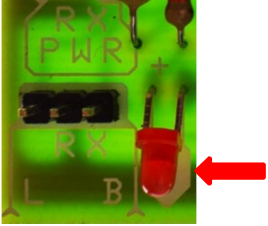


**Learning a remote transmitter button in the receiver for Button trigger open/close operation: -
(25 user memory)**

Action	Pictorial confirmation	Response
Press and hold the required remote transmitter button		RX LED flickers lightly.
Short circuit the middle RX programming pin to the B pin.		RX LED flashes Confirmation. 1 flash = First transmitter learnt. 2 flashes = Successful there is still memory available. Multiple rapid flashes = memory full.
Remove the short circuit once the RX LED flashes confirmation.		RX LED remains lit in standby.
Release remote transmitter button		

How to program a remote into your: **CHALLENGER MkIII**

Learning a remote transmitter button in the receiver for the courtesy light operation: - (6 user memory)

Action	Pictorial confirmation	Response
Press and hold the required remote transmitter button		RX LED flickers lightly.
Short circuit the middle RX programming pin to the L pin.		RX LED flashes Confirmation. 1 flash = First transmitter learnt. 2 flashes = Successful there is still memory available. Multiple rapid flashes = memory full.
Remove the short circuit once the RX LED flashes confirmation.		RX LED remains lit in standby.
Release remote transmitter button		