


How to program a remote into your:
DC BLUE



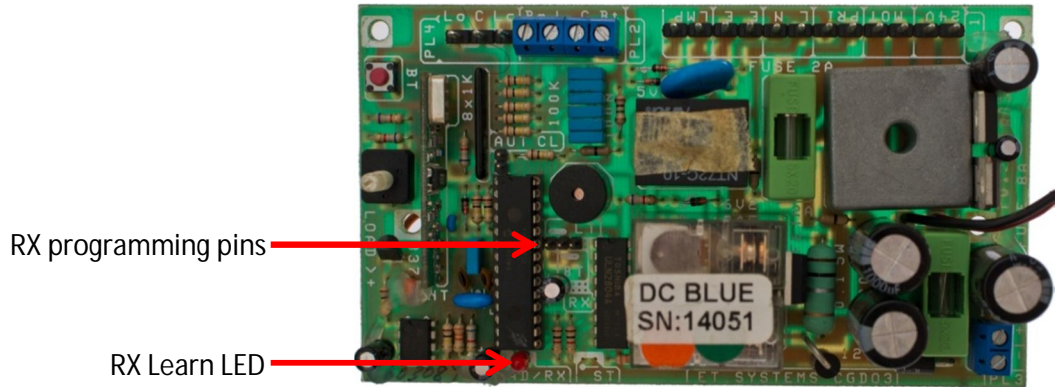


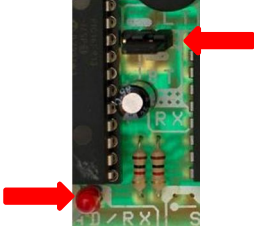

ET BLUE

**Compatible with both the
ET Blue and ET BLU MIX ranges of remotes**

(NB. The ET BLU MIX remote button must be set to the
old ET Blue code for use on this motor)


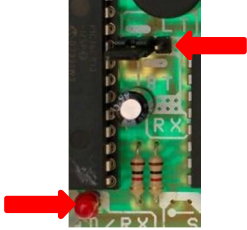



ET BLU MIX

Learning a remote transmitter button in the receiver for open/close operation: - (5 user memory)		
Action	Pictorial confirmation	Response
Press and hold the required remote transmitter button		RX Learn LED flickers lightly.
Short circuit the middle RX programming pin to the BT pin. (Furthest from the IC)		On board buzzer beeps confirmation. 1 Beep = First transmitter learnt. 2 Beeps = Successful there is still memory available. 10 Beeps = memory full.
Remove the short circuit once the buzzer beeps confirmation.		RX Learn LED remains lit in standby.
Release remote transmitter button		

How to program a remote into your: DC BLUE

Learning a remote transmitter button in the receiver for courtesy light operation: - (2 user memory)

Action	Pictorial confirmation	Response
Press and hold the required remote transmitter button		RX Learn LED flickers lightly.
Short circuit the middle RX programming pin to the LT pin. (Closest to the IC)		On board buzzer beeps confirmation. 1 Beep = First transmitter learnt. 2 Beeps = Successful there is still memory available. 10 Beeps = memory full.
Remove the short circuit once the buzzer beeps confirmation.		RX Learn LED remains lit in standby.
Release remote transmitter button		