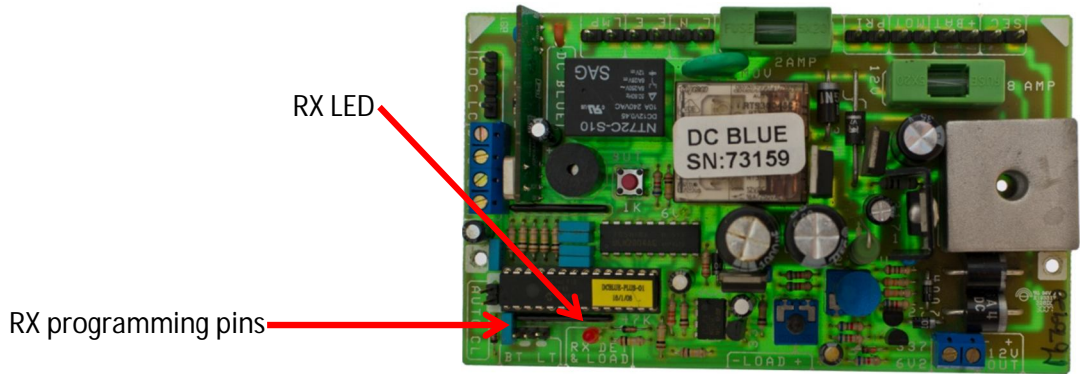

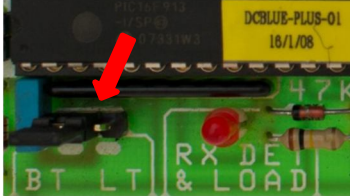
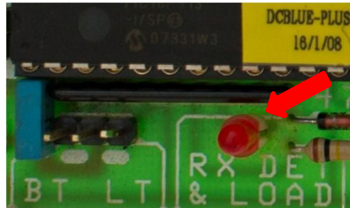


How to program a remote into your:  
**DC BLUE PLUS**


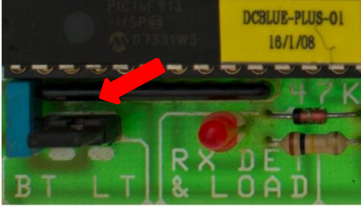
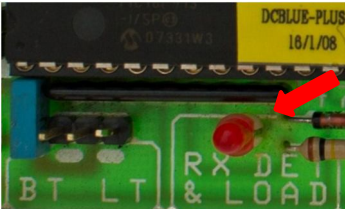


 <p><b>ET BLUE</b></p>	<p><b>Compatible with both the ET Blue and ET BLU MIX ranges of remotes</b></p> <p>(NB. The ET BLU MIX remote button must be set to the old ET Blue code for use on this motor)</p>	 <p><b>ET BLU MIX</b></p>
---	---	--

Learning a remote transmitter button in the receiver for open/close operation: - (25 user memory)		
Action	Pictorial confirmation	Response
Press and hold the required remote transmitter button		RX LED flickers lightly.
Short circuit the middle RX programming pin to the BT pin.		On board buzzer beeps confirmation. 1 Beep = First transmitter learnt. 2 Beeps = Successful there is still memory available. 10 Beeps = memory full.
Remove the short circuit once the buzzer beeps confirmation.		RX LED remains lit in standby.
Release remote transmitter button		

## How to program a remote into your: DC BLUE PLUS

### Learning a remote transmitter button in the receiver for courtesy light operation: - (6 user memory)

Action	Pictorial confirmation	Response
Press and hold the required remote transmitter button		RX LED flickers lightly.
Short circuit the middle RX programming pin to the LT pin.		On board buzzer beeps confirmation. 1 Beep = First transmitter learnt. 2 Beeps = Successful there is still memory available. 10 Beeps = memory full.
Remove the short circuit once the buzzer beeps confirmation.		RX LED remains lit in standby.
Release remote transmitter button		